

Introduction

Contents

Index



Getting Ready



Camera Basics



Shooting



Playback



Wireless Features



Other Settings




## Preliminary Notes and Legal Information



- Take and review some test shots initially to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that result in the failure of an image to be recorded or to be recorded in a way that is machine readable.
- The user's unauthorized photographing or recording (video and/or sound) of people or copyrighted materials may invade the privacy of such people and/or may violate others' legal rights, including copyright and other intellectual property rights. Note that restrictions may apply even when such photographing or recording is intended solely for personal use.
- The camera warranty is valid only in the area of purchase. In case of camera problems while abroad, return to the area of purchase before contacting a Customer Support Help Desk.
- Although the screen is produced under extremely high-precision manufacturing conditions and more than 99.99% of the pixels meet design specifications, in rare cases some pixels may be defective or may appear as red or black dots. This does not indicate camera damage or affect recorded images.
- When the camera is used over an extended period, it may become warm. This does not indicate damage.



# Introduction Top Page

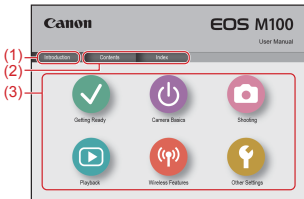


- (1) Jump to this page  
This section introduces manual navigation and conventions.
- (2) Jump to the table of contents and index pages
- (3) Jump to the first page of a section, by clicking one of the six sections



# Introduction Portal Pages



Portal pages are gateways to each section.

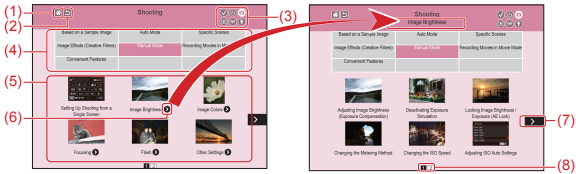

- (1) Jump to the first page
- (2) Return to the previous page
- (3) Section icons  
Click an icon to jump to the section's portal page.
- (4) Section themes  
Topics in the selected theme are shown in (5). Note that some portal pages do not include themes.







## Introduction Portal Pages



- (5) Topics in the selected theme. Click a topic title to jump to the topic page.
- (6) Indicates multiple topics
- (7) Indicates that the information continues on the next page
- (8) Identifies the current page among multiple portal pages





# Introduction

## Topic Pages



(1) Jump to the first page icon  
(2) Return to the previous page icon  
(3) Section icons

**Adjusting Image Brightness (Exposure Compensation)**

Standard exposure is adjustable in 1/3-stop increments, in a range of -3 to +3.

1 Access the exposure compensation bar

2 Set up the camera

Turn the dial as you reach the screen → ▲ button

- (1) Jump to the first page
- (2) Return to the previous page
- (3) Section icons  
Click an icon to jump to the section's portal page.
- (4) Indicates that the information is continued from the previous page
- (5) Indicates that the information continues on the next page

(1) Jump to the first page icon  
(2) Return to the previous page icon  
(3) Section icons

**Registering Web Services  
CANON IMAGE GATEWAY**

4 Choose how to connect to the access point

(a) WPS connection  
Connect with WPS → button → step 5 (A)

(b) Choosing from the list  
Choose an access point → button → step 5 (B)

5 (A) Establish the connection

WPS (PBC mode) → button

On the access point, hold down the WPS connection button for a few seconds.

(4) Previous page arrow icon  
(5) Next page arrow icon



## Introduction Manual Conventions



- Instructions in this manual may include icons representing camera buttons and dials.
- The following camera controls are represented by icons.



- Shooting modes and on-screen icons and text are indicated in brackets.
- Instructions in this manual apply to the camera under default settings.
- For convenience, all lenses and mount adapters are simply referred to as “lenses” and “mount adapters”, whether they are included or sold separately.
- Illustrations in this manual show the camera with the EF-M 15-45mm f/3.5-6.3 IS STM lens attached as an example.
- For convenience, all supported memory cards are simply referred to as the “memory card”.
- Instructions in this manual apply to the camera as set to P mode if “set the shooting mode” step is omitted.



# Contents



Preliminary Notes and Legal Information

Introduction

Contents

Safety Instructions

## Getting Ready

Attaching the Strap

Charging the Battery Pack

Preparing a Memory Card

Inserting/Removing the Battery Pack

Inserting/Removing a Memory Card

Setting the Date and Time

Setting the Display Language

Attaching a Lens

Detaching a Lens

Attaching EF and EF-S Lenses

Detaching EF and EF-S Lenses

Using a Tripod with EF or EF-S Lenses

Using EF or EF-S Lens Image Stabilization

Holding the Camera



## Camera Basics

- Trying the Camera Out
- Part Names
- On/Off
- Shutter Button
- Shooting Modes
- Adjusting the Screen Angle
- Frames on the Shooting Screen
- Shooting Display Options
- Playback Display Options
- Using the Quick Control Screen
- Using the Menu Screen
- Entering Characters
- Indicator Display
- Touch Operations

## Shooting

- Based on a Sample Image
- Auto Mode
- Specific Scenes



Image Effects (Creative Filters)

Manual Mode

Recording Movies in Movie Mode

Convenient Features

## Playback

Viewing

Finding

Managing

Erasing Images

Editing Stills

Processing RAW Images with the Camera

Editing Movies

## Wireless Features

Available Wireless Features

Sending Images to an NFC-Compatible Smartphone

Sending Images to an NFC-Compatible Smartphone (Playback Mode)

Sending Images to a Bluetooth Enabled Smartphone

Registering Web Services

Uploading Images to Web Services



## Other Settings

- Preventing the AF-Assist Beam from Firing
- Deactivating the Red-Eye Reduction Lamp
- Changing the Image Display Period after Shots
- Date-Based Image Storage
- File Numbering
- Formatting Memory Cards
- Low-Level Formatting
- Changing the Video System
- Using Eco Mode
- Power-Saving Adjustment
- Screen Brightness
- Customizing Shooting Information Display
- Customizing Playback Information Display
- World Clock
- Date and Time
- Display Language
- Muting Camera Sounds
- Activating Camera Sounds



- Hiding Hints and Tips
- Listing Shooting Modes by Icon
- Adjusting the Touch-Screen Panel
- Automatically Locking the Touch-Screen Panel
- Disabling Auto Sensor Cleaning
- Activating Sensor Cleaning
- Cleaning the Sensor Manually
- Checking Certification Logos
- Setting Copyright Information to Record in Images
- Deleting All Copyright Information
- Restoring Main Camera Default Settings
- Restoring Defaults for Individual Camera Functions

## Index

- Precautions for Wireless Features (Wi-Fi, Bluetooth, or Others)
- Radio Wave Interference Precautions
- Trademarks and Licensing
- Disclaimer





# Safety Instructions



Be sure to read these instructions in order to operate the product safely.  
Follow these instructions to prevent injury or harm to the operator of the product or others.



## WARNING

Denotes the risk of serious injury or death.

- Keep the product out of the reach of young children.

A strap wrapped around a person's neck may result in strangulation.

- Use only power sources specified in this instruction manual for use with the product.
- Do not disassemble or modify the product.
- Do not expose the product to strong shocks or vibration.
- Do not touch any exposed internal parts.
- Stop using the product in any case of unusual circumstances such as the presence of smoke or a strange smell.
- Do not use organic solvents such as alcohol, benzene or paint thinner to clean the product.
- Do not get the product wet. Do not insert foreign objects or liquids into the product.
- Do not insert foreign objects or liquids into the product.





## Safety Instructions



- Do not use the product where flammable gases may be present.

This may cause electric shock, explosion or fire.

- For products featuring a viewfinder, do not look through the viewfinder at strong light sources such as the sun on a bright day or lasers and other strong artificial light sources.

This may harm your vision.

- Observe the following instructions when using commercially available batteries or provided battery packs.
  - Use batteries/battery packs only with their specified product.
  - Do not heat batteries/battery packs or expose them to fire.
  - Do not charge batteries/battery packs using non-authorized battery chargers.
  - Do not expose the terminals to dirt or let them come into contact with metallic pins or other metal objects.
  - Do not use leaking batteries/battery packs.
  - When disposing of batteries/battery packs, insulate the terminals with tape or other means.

This may cause electric shock, explosion or fire.

If a battery/battery pack leaks and the material contacts your skin or clothing, flush the exposed area thoroughly with running water. In case of eye contact, flush thoroughly with copious amounts of clean running water and seek immediate medical assistance.





## Safety Instructions



- Observe the following instructions when using a battery charger or AC adapter.
  - Periodically remove any dust buildup from the power plug and power outlet using a dry cloth.
  - Do not plug in or unplug the product with wet hands.
  - Do not use the product if the power plug is not fully inserted into the power outlet.
  - Do not expose the power plug and terminals to dirt or let them come into contact with metallic pins or other metal objects.
- Do not touch the battery charger or AC adapter connected to a power outlet during lightning storms.
- Do not place heavy objects on the power cord. Do not damage, break or modify the power cord.
- Do not wrap the product in cloth or other materials when in use or shortly after use when the product is still warm in temperature.
- Do not leave the product connected to a power source for long periods of time.

This may cause electric shock, explosion or fire.

- Do not allow the product to maintain contact with the same area of skin for extended periods of time during use.

This may result in low-temperature contact burns, including skin redness and blistering, even if the product does not feel hot. The use of a tripod or similar equipment is recommended when using the product in hot places and for people with circulation problems or less sensitive skin.



## Safety Instructions



- Follow any indications to turn off the product in places where its use is forbidden. Not doing so may cause other equipment to malfunction due to the effect of electromagnetic waves and even result in accidents.



### CAUTION

Denotes the risk of injury.

- Do not fire the flash near the eyes.

It may hurt the eyes.

- Strap is intended for use on the body only. Hanging the strap with any product attached on a hook or other object may damage the product. Also, do not shake the product or expose the product to strong impacts.
- Do not apply strong pressure on the lens or allow an object to hit it.

This may cause injury or damage to the product.

- Flash emits high temperatures when fired. Keep fingers, any other part of your body, and objects away from the flash unit while taking pictures.

This may cause burns or malfunction of the flash.

- Do not leave the product in places exposed to extremely high or low temperatures. The product may become extremely hot/cold and cause burns or injury when touched.





### CAUTION

Denotes the possibility of property damage.

- Do not aim the camera at intense light sources, such as the sun on a clear day or an intense artificial light source.

Doing so may damage the image sensor or other internal components.

- When using the camera on a sandy beach or at a windy location, be careful not to allow dust or sand to enter the camera.
- Wipe off any dust, grime, or other foreign matter on the flash with a cotton swab or cloth.

The heat emitted from the flash may cause foreign matter to smoke or the product to malfunction.

- Remove and store the battery pack/batteries when you are not using the product.

Any battery leakage that occurs may cause product damage.

- Before you discard the battery pack/batteries, cover the terminals with tape or other insulators.

Contacting other metal materials may lead to fire or explosions.

- Unplug any battery charger used with the product when not in use. Do not cover with a cloth or other objects when in use.

Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.



## Safety Instructions



- Do not leave any dedicated battery packs near pets.

Pets biting the battery pack could cause leakage, overheating, or explosion, resulting in product damage or fire.

 
- If your product uses multiple batteries, do not use batteries that have different levels of charge together, and do not use old and new batteries together. Do not insert the batteries with the + and – terminals reversed.

This may cause the product to malfunction.






# Getting Ready



Attaching the Strap

 

Charging the Battery Pack



Preparing a Memory Card



Inserting/Removing the Battery Pack



Inserting/Removing a Memory Card



Setting the Date and Time



Setting the Display Language



Attaching a Lens



Detaching a Lens






## Getting Ready



 Attaching EF and EF-S Lenses



Detaching EF and EF-S Lenses



Using a Tripod with EF or EF-S Lenses



Using EF or EF-S Lens Image Stabilization




Holding the Camera







# Attaching the Strap

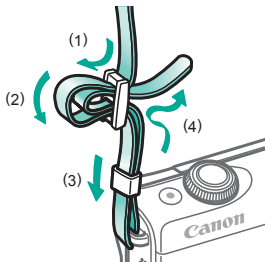




# Charging the Battery Pack



1

 Remove the battery cover




2

Insert the battery pack



3

 Charge the battery pack




- Charging: Orange
- Fully charged: Green





## 4

 Remove the  
battery pack





## Preparing a Memory Card



Use the following memory cards (sold separately), in any capacity.

- SD memory cards\*<sup>1</sup>
- SDHC memory cards\*<sup>1\*2</sup>
- SDXC memory cards\*<sup>1\*2</sup>



- \*1 Cards conforming to SD standards. However, not all memory cards have been verified to work with the camera.
- \*2 UHS-I memory cards are also supported.

 


# Inserting/Removing the Battery Pack




## 1

Open the battery cover




## 2

When inserting the battery pack:

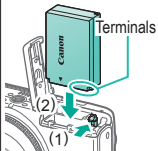


When removing the battery pack:

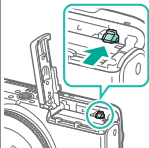

## 3

 Close the battery cover





# Inserting/Removing a Memory Card




1

Open the memory card cover



2

When inserting the memory card:

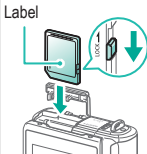

When removing the memory card:



3

Close the memory card cover





# Setting the Date and Time



1


Turn the camera on



2

 
Set the date and time



- ◀▶ buttons to navigate → ▲▼ buttons to adjust →  button

3

Set your home time zone



- ◀▶ buttons to adjust →  button



# Setting the Display Language



 
1


Enter Playback mode



2

Access the menu screen



- Hold down the  button and press the **MENU** button.

3

Set the display language

English	Norsk	Română
Deutsch	Svenska	Türkçe
Français	Español	العربية
Nederlands	Ελληνικά	Ελληνικά
Dansk	Русский	简体中文
Português	Polski	繁體中文
Suomi	Čeština	한국어

-     buttons to adjust →  button





# Attaching a Lens



 
1

Make sure the camera is off




2

Remove the lens cap and body cap




3

 Attach the lens




4

 Remove the front lens cap



## 5

 Prepare to shoot



- Press (1) as you turn (2) slightly, and then release the switch.
- Turn (2) a little more until it clicks.
- Zoom in or out before focusing.





# Detaching a Lens



 
1

Make sure the camera is off



2

Detach the lens



- Press (1) as you turn the lens toward (2) until it stops.
- Remove it in the direction shown (3).

3

Attach the lens cap and body cap





# Attaching EF and EF-S Lenses



 
1

Make sure the camera is off



2

Remove the lens cap and body cap





3

Attach the adapter to the camera



4

  Attach the lens





# Detaching EF and EF-S Lenses



 
1

Make sure the camera is off



2


Detach the lens



- Slide (1) as you turn the lens toward (2) until it stops.
- Remove it in the direction shown (3).

3

 
Detach the adapter



- Press (1) as you turn the adapter toward (2) until it stops.
- Remove it in the direction shown (3).

4

 Attach the lens cap and body cap






# Using a Tripod with EF or EF-S Lenses




1

 Attach the tripod mount to the adapter




2

 Attach the tripod to the tripod mount socket






# Using EF or EF-S Lens Image Stabilization

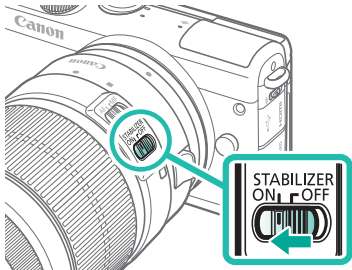



## Holding the Camera

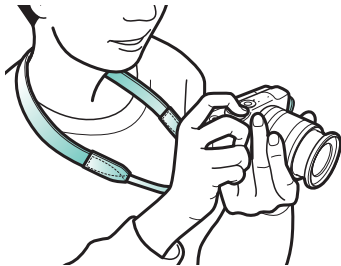






# Camera Basics



 Trying the Camera Out ▶




Part Names



On/Off



 Shutter Button



Shooting Modes



Adjusting the Screen Angle



Frames on the Shooting Screen



Shooting Display Options



Playback Display Options







# Camera Basics



 Using the Quick Control  
Screen



Using the Menu Screen

 

Entering Characters



Indicator Display



Touch Operations >





# Camera Basics

## Trying the Camera Out



Shooting Stills (Scene Intelligent Auto)



Recording Movies (Scene Intelligent Auto)



Viewing Stills



Viewing Movies



Erasing Images



# Trying the Camera Out

## Shooting Stills (Scene Intelligent Auto)



1

Turn the camera on



2

Set the mode



3

Zoom in or out, as needed



- (1) Scene icon
- (2) Remaining number of shots
- (3) Remaining recording time





 
# Trying the Camera Out

## Shooting Stills (Scene Intelligent Auto)



# 4

### Focus



- Press the shutter button lightly.
- The camera beeps twice after focusing.




- An AF frame is displayed around positions in focus.

# 5

### Raise the flash as needed



- If [Raise the flash] is displayed, move the  switch.

# 6

### Shoot





# Trying the Camera Out

## Recording Movies (Scene Intelligent Auto)



1

Turn the camera on



2

Set the mode



3

Zoom in or out, as needed



- (1) Scene icon
- (2) Remaining number of shots
- (3) Remaining recording time



 


## Trying the Camera Out Recording Movies (Scene Intelligent Auto)




# 4

Start recording



# 5

 Stop recording



- Frames are displayed around any detected faces that are in focus.





# Trying the Camera Out

## Viewing Stills



1

Enter Playback mode



2

Browse your images



- ◀ button: Previous image
- ▶ button: Next image





## Trying the Camera Out Viewing Movies



1

Enter Playback  
mode



2

Browse your  
images



- ◀ button: Previous image
- ▶ button: Next image



- Movies are labeled with **[SET ▶]**.

3

Play the movie





## Trying the Camera Out Viewing Movies



# 4

Adjust the volume



● ▲/▼ buttons →

[▶] → (SET) button





# Trying the Camera Out Erasing Images



1

Enter Playback mode



2

 
Browse your images



- ◀ button: Previous image
- ▶ button: Next image

3

Erase






- ◀▶ buttons → [Erase] →



# Part Names

## Front

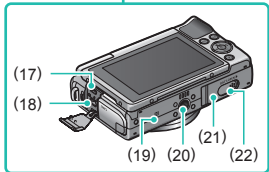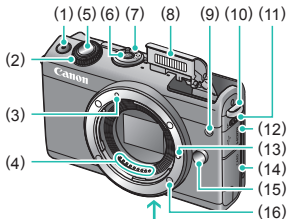



No.	Name	Symbol in This Manual
(1)	Movie button	
(2)	Front dial	
(3)	EF-M lens mount index	
(4)	Contacts	
(5)	Shutter button	
(6)	Power button	
(7)	Mode switch	
(8)	Flash	
(9)	Lamp	





# Part Names

## Front

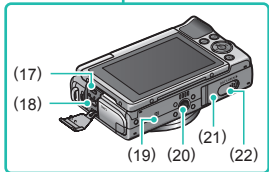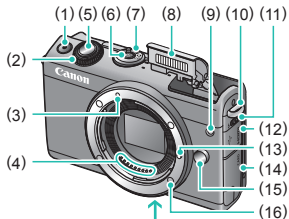


No.	Name	Symbol in This Manual
(10)	Strap mount	
(11)	Flash pop up switch	
(12)	Terminal cover	
(13)	Lens lock pin	
(14)	Memory card cover	
(15)	Lens release button	
(16)	Lens mount	
(17)	HDMI™ terminal	
(18)	Digital terminal	




# Part Names

## Front

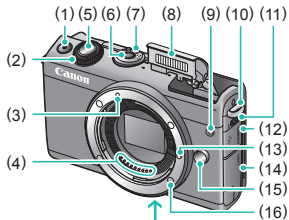


No.	Name	Symbol in This Manual
(19)	N-Mark	
(20)	Tripod socket	
(21)	Battery cover	
(22)	DC coupler terminal cover	

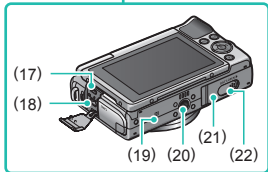



## Part Names Back

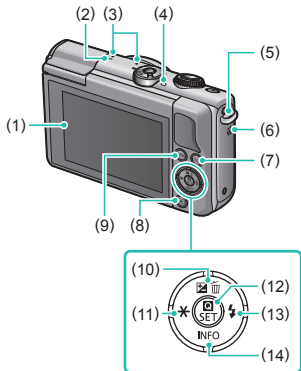


No.	Name	Symbol in This Manual
(1)	Screen / Touch-screen panel	
(2)	Focal plane mark	
(3)	Microphone	
(4)	Indicator	
(5)	Strap mount	
(6)	Speaker	
(7)	Wi-Fi button	
(8)	Playback button	





## Part Names Back

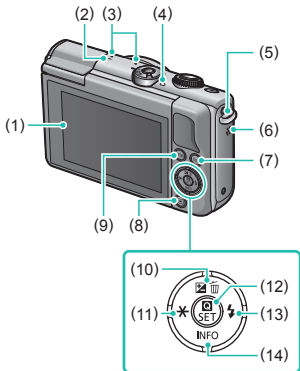

No.	Name	Symbol in This Manual
(9)	Menu button	<b>MENU</b>
(10)	Exposure compensation / Single-image erase / Up button	
(11)	AE lock / Left button	
(12)	Quick Control / Set button	
(13)	Flash / Right button	
(14)	Information / Down button	<b>INFO</b>








## Part Names

### Lens

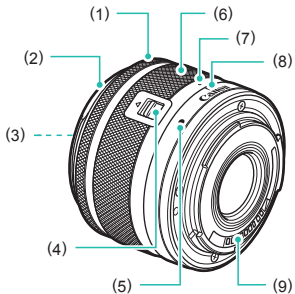

No.	Name	Symbol in This Manual
(1)	Focusing ring	
(2)	Hood mount	
(3)	Filter-mounting thread	
(4)	Lens retraction switch	
(5)	Lens mount index	
(6)	Zoom ring	
(7)	Lens retraction index	
(8)	Zoom position index	
(9)	Contacts	





# On/Off




## Shooting Mode



## Playback Mode



- On: Press the  button.
- Off: Press the power button.

 


# Shutter Button



1

Press halfway  
(Press lightly to  
focus)



- The camera beeps twice.
- A frame is displayed around positions in focus.

2

Press all the way  
down (From the  
halfway position,  
press fully to shoot)



- The camera shoots.



# Shooting Modes





Switch to a shooting mode for how or what you will shoot.

- (1) Fully automatic shooting, with camera-determined settings.
- (2) Add a variety of effects and use your preferred settings.
- (3) For recording movies.

## 1

Set the mode



 
- Move the mode switch.
- When choosing  or , go to step 2.

## 2

Set the shooting mode




- Touch the icon in the upper left.





## Shooting Modes

 


Switch to a shooting mode for how or what you will shoot.

- (1) Fully automatic shooting, with camera-determined settings.
- (2) Add a variety of effects and use your preferred settings.
- (3) For recording movies.

### 3
 
#### Set up the camera


- Drag up or down to browse shooting modes, and touch a mode of your choice.



- Touch [OK].



## Adjusting the Screen Angle

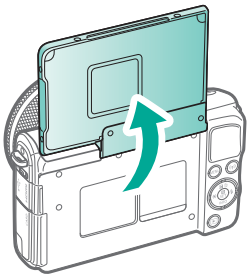

- The screen can be opened to about 180°.



# Frames on the Shooting Screen



## White frame



- Displayed around the subject or person's face detected as the main subject.

## Green frame



- Displayed after the camera focuses when you press the shutter button halfway.

## Blue frame



- Displayed as the camera continues to focus on moving subjects in [A+] mode. Displayed as long as you press the shutter button halfway.

## Orange frame + [!]



- Displayed if the camera cannot focus when you press the shutter button halfway.



# Shooting Display Options



Shooting information



Histogram



No information display



INFO. Quick Control screen

1

Switch the display modes







# Playback Display Options



No information display



Information display 1  
(summary)



Information display 2  
(details)



Information display 3  
(details)

1

Switch the display  
modes





# Using the Quick Control Screen



1

Access the setting screen



- (1) Setting items
- (2) Setting options

2

Choose the setting item



3

Choose the setting option





## 4

Confirm your choice and exit



- To set items labeled **[MENU]**, press the **MENU** button.



 
 


# Using the Menu Screen



1

Access the menu screen



- (1) Function tabs
- (2) Page tabs
- (3) Setting items
- (4) Setting options

2

Choose a tab



3

Choose the setting item





## 4

Choose the setting option



## 5

Confirm your choice and exit





# Entering Characters

 


## Entering characters




- Touch a character → [OK]

## Moving the cursor




- Touch [←]/[→].

## Switching input modes

 

- [⇧]: Switch to numbers or symbols
- [⇧]: Switch to uppercase

## Deleting characters

 

- Touch [✕].






## Entering Characters



 
Entering line breaks



● Touch [↵].



 Returning to the previous screen






# Indicator Display



Indicator display varies depending on the camera status.

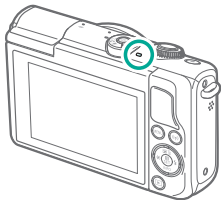

Color	Status	Camera Status
Green	Slow blinking	<ul style="list-style-type: none"><li>● Connected to a computer</li><li>● Display off</li></ul>
	Blinking	<ul style="list-style-type: none"><li>● Starting up</li><li>● Recording to/reading from a memory card</li><li>● Communicating with other devices</li><li>● Shooting long exposures</li><li>● Connecting/transmitting via Wi-Fi</li></ul>






# Camera Basics
 
## Touch Operations



Quick Control Screen



MENU



Playback



# Touch Operations

## Quick Control Screen



### Accessing the setting screen



- Touch **[Q]**.

### Setting up the camera



- Touch a setting item (1)  
→ option (2).

### Returning to the previous screen



- Touch **[↶]**, or touch the selected item again.

### Switching screens



- Touch **[MENU]**.





## Touch Operations Quick Control Screen



### Adjusting amounts on bars



- Touch or drag the bar.

 




# Touch Operations MENU




## Setting up the camera



- Touch a function tab (1) → page tab (2) → setting item (3) → option (4).

## Returning to the previous screen

 


- Touch **[MENU]**.

## Adding/removing check marks



 - Touch a check box.

## Instead of pressing the **INFO** button



- Touch **[INFO]**.






# Touch Operations
 
## MENU




Instead of pressing the **MENU** button



- Touch **[MENU]**.

 Instead of pressing the **SET** button



- Touch **[SET]**.





# Touch Operations

## Playback



### Viewing images individually



- Next image: Drag left
- Previous image: Drag right

### Playing movies



- Play: Touch [▶]
- Adjust volume: During playback, drag up/down quickly

### Operations during movies



- Stop: Touch the screen
- Resume: Touch [▶]
- Adjust volume: Touch [🔊]

### Switching to index display





## Touch Operations Playback



Displaying fewer  
images



Magnifying images  
(about 3x)



- Quickly touch twice.

Magnifying images  
(up to 10x)



Reducing  
magnified images



- Restore original size:  
Touch **[MENU]**





# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Self Portraits under Optimal Settings



Portraits



Smooth Skin



Landscapes



Close-ups



Moving Subjects







# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Enhancing Colors of Food



Evening Scenes without a Tripod



Backlit Scenes



Monochrome



Soft Focus Effect



Fish-Eye Lens Effect



# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Oil Painting Effect



Watercolor Effect



Toy Camera Effect



Miniature Model Effect



High-Contrast Scenes



# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Scene Intelligent Auto (Stills)



Scene Intelligent Auto (Movies)



Hybrid Auto Mode



# Scene Intelligent Auto (Stills)



1

Turn the camera on



2

Set the mode



3

Zoom in or out, as needed



4

Shoot





# Scene Intelligent Auto (Movies)



1

Turn the camera on



2

Set the mode



 
3

Zoom in or out, as needed



4

Start recording






## 5

Adjust how the shot is composed, as needed



## 6

 Stop recording





# Hybrid Auto Mode



You can make a short movie of the day just by shooting stills. The camera records 2 – 4-second clips of scenes before each shot, which are later combined in a digest movie.

 
1

Set the mode



2

Set the shooting mode



• [A] → [OK]

3

Compose the shot and shoot





# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Self Portraits under Optimal Settings



Portraits



Smooth Skin



Landscapes



Close-ups



Moving Subjects







# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Enhancing Colors of Food



Evening Scenes without a Tripod



Backlit Scenes





# Self Portraits under Optimal Settings

 


 Self Portrait

For self-portraits, customizable image processing includes skin smoothing as well as brightness and background adjustment to make yourself stand out.

1

Open the screen



2

Set the shooting mode



- Touch .

3

Set up the camera



- Touch an item.



- Adjust the level.





## Self Portraits under Optimal Settings



 Self Portrait

For self-portraits, customizable image processing includes skin smoothing as well as brightness and background adjustment to make yourself stand out.

---

# 4

Shoot





# Portraits



 Portrait

Take shots of people with a softening effect.

 
1

Set the mode



2

Set the shooting mode



●  → [OK]

3

Shoot





# Smooth Skin



 Smooth Skin

Processes images to make skin look smoother.

1


Set the mode



2

Set the shooting mode



● [] → [OK]

3

Shoot





# Landscapes



 Landscape

Capture wide-open landscapes or similar scenery in sharp focus from near to far, with blue skies and greenery reproduced vividly.

 
1

Set the mode



2

Set the shooting mode



●  → [OK]

3

Shoot





# Close-ups



 Close-up

For shooting close-ups of flowers or other small objects.

 
1

Set the mode



2

Set the shooting mode



●  → [OK]

3

Shoot





# Moving Subjects



 Sports

Shoot continuously as the camera keeps the subject in focus.

 
1


Set the mode



2

Set the shooting mode



●  → [OK]

3

Shoot







# Enhancing Colors of Food



Food

Adjust color tones to make food look fresh and vibrant.

 
1

Set the mode



2


Set the shooting mode



● → [OK]

3

 Adjust the color tone





## Enhancing Colors of Food



 Food

Adjust color tones to make food look fresh and vibrant.

---

# 4

Shoot





# Evening Scenes without a Tripod



 Handheld Night Scene

Beautiful shots of evening scenes or portraits with evening scenery in the background, without the need to hold the camera very still (as with a tripod).

 
1


Set the mode



2

Set the shooting mode



●  → [OK]

3

Shoot





# Backlit Scenes



 HDR Backlight Control

Three consecutive images are captured at different brightness levels each time you shoot, and the camera combines image areas with optimal brightness to create a single image. This mode can reduce the loss of detail in shadows that tends to occur in shots with mixed bright and dark image areas.

 
1


Set the mode



2

Set the shooting mode



●  → [OK]

3

Shoot





# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Monochrome



Soft Focus Effect



Fish-Eye Lens Effect



Oil Painting Effect



Watercolor Effect



Toy Camera Effect





# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Miniature Model Effect



High-Contrast Scenes



HDR Effect





# Monochrome



 Grainy B/W

Take monochrome pictures with a gritty, rough feeling.

 
1

Set the mode



2


Set the shooting mode



●  → [OK]

3

 Adjust the effect level





# Monochrome



 Grainy B/W

Take monochrome pictures with a gritty, rough feeling.

---

## 4

Shoot







# Soft Focus Effect



Normal



 Soft focus

This function allows you to shoot images as if a soft focus filter were attached to the camera.

1

Set the mode



2

 
Set the shooting mode



●  → [OK]

3

Adjust the effect level





## Soft Focus Effect



Normal



 Soft focus

This function allows you to shoot images as if a soft focus filter were attached to the camera.

---

# 4


Shoot





# Fish-Eye Lens Effect



 Fish-eye effect

Shoot with the distorting effect of a fish-eye lens.

1

Set the mode



2

 
Set the shooting mode



●  → [OK]

3


Adjust the effect level





## Fish-Eye Lens Effect



 Fish-eye effect

Shoot with the distorting effect of a fish-eye lens.

---

4


Shoot





# Oil Painting Effect



 Art bold effect

Make subjects look more substantial, like subjects in oil paintings.

1


Set the mode



2

 
Set the shooting mode



●  → [OK]

3


Adjust the effect level





## Oil Painting Effect



 Art bold effect

Make subjects look more substantial, like subjects in oil paintings.

---

# 4


Shoot





# Watercolor Effect



 Water painting effect

Soften colors, for photos resembling watercolor paintings.

 
1

Set the mode



2


Set the shooting mode



•  → [OK]

3

 
Adjust the effect level





## Watercolor Effect



 Water painting effect

Soften colors, for photos resembling watercolor paintings.

---

# 4

Shoot








# Toy Camera Effect



 Toy camera effect

This effect makes images resemble shots from a toy camera, with vignetting (darker, blurred image corners) and modified color overall.

1

Set the mode



2

 
Set the shooting mode



 → [OK]

3

Choose an effect






## Toy Camera Effect



This effect makes images resemble shots from a toy camera, with vignetting (darker, blurred image corners) and modified color overall.

 Toy camera effect

---

# 4

Shoot





# Miniature Model Effect



 Miniature effect

Creates the effect of a miniature model, by blurring image areas outside a selected area.

 
1


Set the mode



2

Set the shooting mode



●  → [OK]

3

Choose the area to keep in focus





## Miniature Model Effect



 Miniature effect

Creates the effect of a miniature model, by blurring image areas outside a selected area.



● To resize the frame:

 


● To move the frame:



### 4

For movies,  
choose the speed



### 5

Return to the  
shooting screen





## Miniature Model Effect



 Miniature effect

Creates the effect of a miniature model, by blurring image areas outside a selected area.

---

# 6

Shoot





# High-Contrast Scenes



Normal



HDR

Three consecutive images are captured at different brightness levels each time you shoot, and the camera combines image areas with optimal brightness to create a single image (High Dynamic Range). This mode can reduce the washed-out highlights and loss of detail in shadows that tend to occur in high-contrast shots.

 
1

Set the mode



2

Set the shooting mode



● (HDR) → [OK]

3

Shoot





# HDR Effect



Natural



 
Art Standard



Art Vivid



Art Bold



Art Embossed

1

Set the mode



2

 
Set the shooting mode



● [HDR] → [OK]

3

Choose an effect





## HDR Effect



Natural



 
Art Standard



Art Vivid



Art Bold



Art Embossed

---

# 4

Shoot







# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Setting Up Shooting from a Single Screen



Focusing >



Image Brightness >



Image Colors >



Flash >



Other Settings >





# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Specific Shutter Speeds and Apertures ➤



Customizing the Camera ➤



Creative Assist ➤



# Setting Up Shooting from a Single Screen



The INFO. Quick Control screen provides convenient, single-screen access to a variety of shooting settings.

1

Access the setting screen



- Press the button a few times.

2

Choose a setting to configure



- Press the button.

- buttons to navigate → dial to adjust



# Shooting Image Brightness



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Adjusting Image Brightness  
(Exposure Compensation)



Deactivating Exposure  
Simulation



 
Locking Image Brightness /  
Exposure (AE Lock)



Changing the Metering Method



Changing the ISO Speed



Adjusting ISO Auto Settings





# Shooting Image Brightness



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Auto Correction of Brightness and Contrast (Auto Lighting Optimizer)



Shooting Bright Subjects (Highlight Tone Priority)





# Adjusting Image Brightness (Exposure Compensation)



Set toward -



$\pm 0$



Set toward +

Standard exposure is adjustable in 1/3-stop increments, in a range of -3 to +3.

1

Access the exposure compensation bar



2

Set up the camera



- Turn the  dial as you watch the screen  $\rightarrow$   button




# Deactivating Exposure Simulation



Images are displayed at a brightness simulating the actual brightness as captured. For this reason, screen brightness is also adjusted in response to changes in exposure compensation. This feature can be disabled to keep the screen at a brightness convenient for shooting, unaffected by exposure compensation.

1

 Access the menu screen



2

Set up the camera



- [Camera icon] → [Expo. simulation] → [Disable]



# Locking Image Brightness / Exposure (AE Lock)



Without AE lock



AE lock

Before shooting, you can lock the exposure, or you can specify focus and exposure separately.

## 1

Lock the exposure



- Aim the camera at the subject to shoot with the exposure locked, and then press the button.

## 2

 
Compose the shot and shoot







# Changing the Metering Method



Evaluative metering



Partial metering



Spot metering



Center-weighted average

1

Access the setting screen



2

Set up the camera



- → choose an option →



# Changing the ISO Speed



Low



High

Set the ISO speed to [AUTO] for automatic adjustment to suit the shooting mode and conditions. Otherwise, set a higher ISO speed for higher sensitivity, or a lower value for lower sensitivity.

1

Access the ISO speed bar



- Touch **[ISO AUTO]**.

2

Set up the camera



- ◀▶ buttons → button



# Adjusting ISO Auto Settings



Maximum set low

 


Maximum set high

You can limit the ISO speed when ISO speed is set to AUTO.

1

Access the menu screen



2

Set up the camera



- [CAMERA] → [ISO speed] → [ISO Auto]  
→ choose an option  
→ [SET] button



# Auto Correction of Brightness and Contrast (Auto Lighting Optimizer)



 Off  
Disable



 Low



 Standard



 High

1



Access the setting screen



2

Set up the camera



-  → choose an option → 




# Shooting Bright Subjects (Highlight Tone Priority)



Improve gradation in bright image areas to avoid loss of detail in subject highlights.


1

 Access the menu screen



2

 Set up the camera



- [CAMERA] → [Highlight tone priority] → [Enable] → [SET] button



# Shooting Image Colors



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Capturing Natural Colors (White Balance)



Custom White Balance



Manually Correcting White Balance



Manually Setting White Balance  
Color Temperature



Choosing Color Tones (Picture Style)



Customizing Picture Styles





## Shooting Image Colors



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Saving Customized Picture  
Styles





# Capturing Natural Colors (White Balance)



Daylight



Cloudy



Tungsten light

By adjusting white balance (WB), you can make image colors look more natural for the scene you are shooting.

1

Access the setting screen



2

Set up the camera



- **[WB]** → choose an option → **[SET]** button





# Custom White Balance



Loading white

For image colors that look natural under the light in your shot, adjust white balance to suit the light source where you are shooting. Set the white balance under the same light source that will illuminate your shot.

1

 
Shoot a white object



- With a plain white object filling the entire screen, focus and shoot.


2

Access the menu screen



3

 Access the custom WB screen



- [CAMERA] → [Custom WB] → [SET] button





## Custom White Balance



Loading white

For image colors that look natural under the light in your shot, adjust white balance to suit the light source where you are shooting. Set the white balance under the same light source that will illuminate your shot.

### 4

 
Load the white data



- Select your image from step 1 → button → [OK] → button

### 5

Return to the shooting screen



### 6

Access the setting screen





## Custom White Balance



Loading white

For image colors that look natural under the light in your shot, adjust white balance to suit the light source where you are shooting. Set the white balance under the same light source that will illuminate your shot.

---

# 7

Set up the camera



● [AWB] → [ ] → [SET]  
button



# Manually Correcting White Balance



Daylight shot



Corrected

You can manually correct white balance. This adjustment can match the effect of using a commercially available color temperature conversion filter or color-compensating filter.

1


Access the setting screen



2

 
Set up the camera



- [WB] → choose an option →  dial to adjust

3

Set in greater detail, as needed





## Manually Correcting White Balance



Daylight shot



Corrected

You can manually correct white balance. This adjustment can match the effect of using a commercially available color temperature conversion filter or color-compensating filter.



- **MENU** button →  
▲/▼/◀▶ buttons  
to adjust → **MENU**  
button



# Manually Setting White Balance Color Temperature



A value can be set representing the white balance color temperature.

1

Access the setting screen



2

Choose the setting item



● [AVB] → [K] →  
[5200K]

3

Set up the camera



● Choose an option →  
[SET] button



# Choosing Color Tones (Picture Style)



Standard



Landscape

Choose a Picture Style with color settings that express moods or subjects well. Eight Picture Styles are available, and each can be further customized.

 
1

Access the setting screen



2

Set up the camera



- → choose an option →



# Customizing Picture Styles



Customize parameters of Picture Styles such as contrast or saturation.

 
1


Access the setting screen



2

Choose a style




-  → choose an option → [Settings]

3

Set up the camera



- Choose an item → adjust →  button





# Saving Customized Picture Styles



Save presets (such as or ) that you have customized as new styles. You can create several Picture Styles with different settings for parameters such as sharpness or contrast.

 
1

Access the setting screen



2

Select a user-defined style number





3

Select a style to modify






Save presets (such as  or ) that you have customized as new styles. You can create several Picture Styles with different settings for parameters such as sharpness or contrast.

### 4

Customize the style



- ▲/▼ buttons to choose an option to modify → ◀▶ buttons to customize →  button



# Shooting Focusing



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Shooting in Manual Focus  
Mode



Fine-Tuning the Focus



Easily Identifying the Focus  
Area (MF Peaking)



Choosing the AF Method



Shooting with Servo AF



Changing the Focus Setting





## Shooting Focusing



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Choosing Subjects to Focus On  
(Touch AF)





 
 
# Shooting in Manual Focus Mode



When focusing is not possible in AF mode, use manual focus. To make focusing easier, magnify the display.


## 1

Choose **[MF]**  
(EF-M lenses)



- [CAMERA] → [Focus mode] → [MF] → [SET] button → **MENU** button

 (Other lenses)



- Set the lens switch to MF.





## Shooting in Manual Focus Mode



When focusing is not possible in AF mode, use manual focus. To make focusing easier, magnify the display.

# 2

Activate magnification



- Touch [Q].

# 3

Choose an area to focus on



- Drag across the screen to display an area to focus on.
- To center the display again, press the ▼ button.

# 4

Focus





## Shooting in Manual Focus Mode



When focusing is not possible in AF mode, use manual focus. To make focusing easier, magnify the display.

---

# 5

Shoot





# Fine-Tuning the Focus



Autofocus

 


Focusing ring

Fine-tune autofocusing with an EF-M lens attached by turning the focusing ring.


1

Access the menu screen



2

 
Set up the camera



- [CAMERA] → [Focus mode] → [AF+MF] → [SET] button

3

 Focus



- Hold the shutter button halfway down.







## Fine-Tuning the Focus



Autofocus



Focusing ring

Fine-tune autofocusing with an EF-M lens attached by turning the focusing ring.

4

Fine-tune the focus



- Magnification is activated.

5

Shoot





# Easily Identifying the Focus Area (MF Peaking)



MF peaking off

 


MF peaking on

Edges of subjects in focus are displayed in color to make manual focusing easier. You can adjust the colors and the sensitivity (level) of edge detection as needed.


1

Access the menu screen




2

 Set up the camera



 ● [CAMERA] → [MF Peaking Settings] → [Peaking] → [On]





## Easily Identifying the Focus Area (MF Peaking)



MF peaking off



MF peaking on

Edges of subjects in focus are displayed in color to make manual focusing easier. You can adjust the colors and the sensitivity (level) of edge detection as needed.



- ▲/▼ buttons to navigate → ▲/▼ buttons to adjust



# Choosing the AF Method



1-point AF



+Tracking



Smooth zone AF

Change the auto focus (AF) mode to suit shooting conditions.

1

Access the setting screen



2

Set up the camera



- [AF □] → choose an option → SET button



# Shooting with Servo AF



This mode helps avoid missing shots of subjects in motion, because the camera continues to focus on the subject and adjust the exposure as long as you press the shutter button halfway.

1

Access the setting screen



2

 
Set up the camera



● [ONE SHOT] →  
[SERVO] → SET  
button

3

Focus





## Shooting with Servo AF



This mode helps avoid missing shots of subjects in motion, because the camera continues to focus on the subject and adjust the exposure as long as you press the shutter button halfway.

---

# 4

Shoot





# Changing the Focus Setting



Enable: Focus on moving subjects

 


Disable: Focus on stationary subjects

You can change default camera operation of constantly focusing on subjects it is aimed at, even when the shutter button is not pressed. Instead, you can limit camera focusing to the moment you press the shutter button halfway.

## 1

Access the menu screen



## 2

Set up the camera



- [Camera Icon] → [Continuous AF] → [Disable]



# Choosing Subjects to Focus On (Touch AF)



AF □



AF ☺

You can shoot after the camera focuses on your selected subject, person's face, or position on the screen.

1

Touch a subject to focus on



2

Shoot







# Shooting Flash



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Changing the Flash Mode



 
Adjusting the Flash Exposure  
Compensation



Shooting with the FE Lock



Changing the Flash Timing



Changing the Flash Metering  
Mode



Adjusting the Flash Output






## Shooting Flash



 Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Resetting Flash Settings





# Changing the Flash Mode



You can change the flash mode to match the shooting scene. To illuminate the main subject (such as people) and reduce shadows in the background, use Slow Synchro.

 
1


Raise the flash



2

Set up the camera



- ▶ button → choose a flash mode →  button



# Adjusting the Flash Exposure Compensation



Set toward -



Set toward +

Just as with regular exposure compensation, you can adjust the flash exposure from -2 to +2 stops, in 1/3-stop increments.

 
1



Raise the flash



2

Set up the camera



▶ button →   
dial to adjust →   
button



# Shooting with the FE Lock



FE lock



Without FE lock  
(overexposed)

Just as with the AE lock, you can lock the exposure for flash shots.

 
1

Raise the flash



2

Set to [⚡]



▶ button → [⚡]

3

Lock the flash exposure



- Aim at subject for fixed exposure → ◀ button





## Shooting with the FE Lock



FE lock



Without FE lock  
(overexposed)

Just as with the AE lock, you can lock the exposure for flash shots.

---

# 4

Compose the shot  
and shoot





# Changing the Flash Timing



1st-curtain flash

 


2nd-curtain flash

Change the timing of the flash and shutter release.


1

Access the menu screen



2

 Set up the camera




- [CAMERA] → [Flash Control] → [Built-in flash settings] → [Shutter Sync.] → choose an option



# Changing the Flash Metering Mode



 Evaluative




Average

[Evaluative] flash metering, which enables standard flash exposure, can be changed to average flash metering across the metering area, as when using an externally metered flash.


1

 Access the menu screen



2

 Set up the camera



- [CAMERA] → [Flash Control] → [E-TTL II meter.] → [Average] → [SET] button





# Adjusting the Flash Output



Minimum



Maximum

Choose from the three flash levels in **[M/Av/Tv]** modes.

1

Set the mode



2

Set the shooting mode



● **[M/Av/Tv]** →  
[OK]

3

Access the menu screen





## Adjusting the Flash Output



: Minimum

 


: Maximum

Choose from the three flash levels in **[M/Av]** modes.

# 4

Set up the camera



- [5] → [Flash Control] → [Built-in flash settings] → [Flash Mode] → [Manual flash] → **MENU** button

# 5

Raise the flash



# 6

Adjust the flash output





## Adjusting the Flash Output



Minimum



Maximum

Choose from the three flash levels in **[M/Av]** / **[Tv]** modes.



- ▶ button → dial to adjust → SET button

 


# Resetting Flash Settings



1

Access the menu screen




2

Restore the default settings



 - [CAMERA] → [Flash Control] → [Clear settings]



- [OK] → [SET] button



# Shooting Other Settings



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Changing the IS Mode Settings



Correcting Camera Shake when Recording Movies



Correcting Lens Aberrations



Changing the Noise Reduction Level



Using Multi Shot Noise Reduction



Reducing Noise at Slow Shutter Speeds



# Changing the IS Mode Settings



Continuous

 


Off

Configure image stabilization via the camera menu when using an EF-M lens with image stabilization.

1

Access the menu screen



2

Set up the camera



- [CAMERA] → [IS Settings]  
→ [IS Mode] →  
choose an option



# Correcting Camera Shake when Recording Movies



Enable

 


Disable

Activate image stabilization on the camera to correct camera shake when recording movies with a lens that supports image stabilization.


1

Access the menu screen



2

 Set up the camera



- [CAMERA] → [IS Settings]  
→ [Digital IS] →  
choose an option



# Correcting Lens Aberrations



Peripheral illumination correction: Disable

 


Peripheral illumination correction: Enable

Correct vignetting and subject color fringing due to lens characteristics, or lack of image sharpness due to aperture.


## 1

Access the menu screen




## 2

 Set up the camera



 - [CAMERA] → [Lens aberration correction] → choose an option
- Confirm that [Correction data available] is displayed.



- Choose an option → [SET] button






# Changing the Noise Reduction Level



 You can choose from 3 levels of noise reduction: [Standard], [High], [Low]. This function is especially effective when shooting at high ISO speeds.

1

Access the menu screen



2

Set up the camera



- [CAMERA] → [High ISO speed NR] → choose an option → [SET] button




# Using Multi Shot Noise Reduction



 Automatically combine four images captured at once to reduce noise. This enables higher image quality than setting [High ISO speed NR] to [High].

1

Access the menu screen



2

Set up the camera



- [CAMERA] → [High ISO speed NR] → [NR] → [SET] button




# Reducing Noise at Slow Shutter Speeds



 Reduce noise from long exposures at shutter speeds of one second or slower.


1

Access the menu screen



2

 Set up the camera



- [CAMERA] → [Long exp. noise reduction] → choose an option → [SET] button



# Shooting

## Specific Shutter Speeds and Apertures



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Specific Shutter Speeds (Tv Mode)



Specific Aperture Values (Av Mode)



Specific Brightness/Exposure (M Mode)



Shooting Long Exposures (Bulb)



Recording Movies at Specific Shutter Speeds and Aperture Values



# Specific Shutter Speeds (Tv Mode)



Slow



Fast

Set your preferred shutter speed before shooting. The camera automatically adjusts the aperture value to suit your shutter speed.

1

Set the mode



2

Set the shooting mode



• [Tv] → [OK]

3

Set up the camera



• Turn the  dial.





## Specific Shutter Speeds (Tv Mode)



Slow



Fast

Set your preferred shutter speed before shooting. The camera automatically adjusts the aperture value to suit your shutter speed.

---

# 4

Shoot





# Specific Aperture Values (Av Mode)



Small



Large

Set your preferred aperture value before shooting. The camera automatically adjusts the shutter speed to suit your aperture value.

 
1

Set the mode



2

Set the shooting mode



● [Av] → [OK]

3

Set up the camera



● Turn the  dial.





## Specific Aperture Values (Av Mode)



Small



Large

Set your preferred aperture value before shooting. The camera automatically adjusts the shutter speed to suit your aperture value.

---

# 4

Shoot







# Specific Brightness/Exposure (M Mode)



Set the shutter speed and aperture value to obtain your desired exposure.

 
1

Set the mode



2

Set the shooting mode



● **[M]** → [OK]

3

Set the ISO speed



● **[ISO AUTO]** → choose an ISO speed





## Specific Brightness/Exposure (M Mode)



Set the shutter speed and aperture value to obtain your desired exposure.

# 4

Set the shutter speed





● Turn the  dial.

# 5

Set the aperture value



●  button →  dial

# 6

Shoot





# Shooting Long Exposures (Bulb)



With bulb exposures, shots are exposed for as long as you hold down the shutter button all the way down.

 
1

Set the mode



2

Set the shooting mode



● **M** → [OK]

3

Set up the camera





## Shooting Long Exposures (Bulb)




With bulb exposures, shots are exposed for as long as you hold down the shutter button all the way down.

# 4

## Shoot



- Turn the  dial to set the shutter speed to [BULB].





# Recording Movies at Specific Shutter Speeds and Aperture Values



Manual movie

Set your preferred shutter speed, aperture value, and ISO speed.

1

Set the mode



2

Set the shooting mode




● [M] → [OK]

3

Set the ISO speed



● ▲ button → 





## Recording Movies at Specific Shutter Speeds and Aperture Values



Manual movie

Set your preferred shutter speed, aperture value, and ISO speed.

4

Set the shutter speed




● ▲ button →   
dial

5

 
Set the aperture value



● ▲ button →   
dial

6

Shoot






# Shooting

## Customizing the Camera



 Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Configuring Custom Functions



Changing Items on the Quick Control Screen



Rearranging Items on the Quick Control Screen



# Configuring Custom Functions

 


Configure custom functions on the [Fn] tab of the menu to customize how the camera works to suit your shooting preferences.

You can also assign commonly used functions to specific buttons.


1

Access the menu screen



2

 
Choose the type of function to customize



- [Fn] → choose an item → [SET] button

3

 
Choose a function



- Choose a function → [SET] button

4

 Choose an option



- Choose an option → [SET] button







# Changing Items on the Quick Control Screen



  1


Access the menu screen



- [CAMERA] → [Quick setting menu layout] → [MENU] button

2

 
Choose icons to include



- Choose an icon → [MENU] button to select (✓) → MENU button

3

 Set up the camera



- [OK] → [MENU] button




# Rearranging Items on the Quick Control Screen


 
# 1

Access the menu screen



- [CAMERA] → [Quick setting menu layout] → [MENU] button

# 2

Rearrange the icons



- Touch [Sort].



- Choose an icon → [MENU] button → ▲/▼ buttons → choose a destination → [MENU] button → **MENU** button



 



## Rearranging Items on the Quick Control Screen



### 3

Set up the camera



● [OK] →  button





# Shooting Creative Assist



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Shooting with Your Favorite  
Settings (Creative Assist)



Saving Creative Assist  
Settings



Loading Creative Assist  
Settings



Using Settings from Creative  
Assist Images



# Shooting with Your Favorite Settings (Creative Assist)



Defocus the background, adjust brightness, or change other settings in other ways as you watch the screen. You can also save your settings or apply settings from past images captured in [★] mode.

1

Set the mode



2

Set the shooting mode



● [★] → [OK]

 
3

Access the setting screen





## Shooting with Your Favorite Settings (Creative Assist)



Defocus the background, adjust brightness, or change other settings in other ways as you watch the screen.

You can also save your settings or apply settings from past images captured in [★] mode.

# 4

Set up the camera



● ▲/▼ buttons to navigate → ◀▶ buttons to adjust

# 5

Return to the shooting screen



# 6

Shoot





# Saving Creative Assist Settings



 
1

Set the mode



2

Set the shooting mode



3

Access the setting screen





## 4

 
Set up the camera



- ▲/▼ buttons to navigate → ◀▶ buttons to adjust → (SET) button

## 5

Register



- [★] → choose an option → (SET) button

## 6

Return to the shooting screen



- [OK] → (SET) button







# Loading Creative Assist Settings



 
 
1

Set the mode



2

Set the shooting mode



3

Access the setting screen





## 4

Load the settings



- [Creative Assist icon] → choose an option → [Creative Assist button]





# Using Settings from Creative Assist Images



 
1

Set the mode



2

Set the shooting  
mode



● [Creative Assist] → [OK]


3

Enter Playback  
mode






## 4

Choose an image from  mode





- Choose an image →  button

## 5

Apply the settings



-  →  button





# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Recording Movies



Locking or Changing Image Brightness



Disabling Auto Slow Shutter



Recording Time-Lapse Movies  
(Time-Lapse Movie)



Adjusting the Recording  
Volume



Deactivating the Wind Filter





# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Using the Attenuator





# Recording Movies



Record movies in [MOVIE] mode using a variety of effects and features.

 
1

Set the mode



2

Set the shooting mode



● [MOVIE] → [OK]

3

Start recording





## Recording Movies

 


Record movies in [📹] mode using a variety of effects and features.

---

# 4

Stop recording







# Locking or Changing Image Brightness



Set toward -



Set toward +

You can lock the exposure before or during recording or adjust it in 1/3-stop increments within a range of -3 to +3 stops.

 
1

Set the mode



2

Set the shooting mode



● [MOVIE] → [OK]

3

Lock the exposure





## Locking or Changing Image Brightness



Set toward -



Set toward +

You can lock the exposure before or during recording or adjust it in 1/3-stop increments within a range of -3 to +3 stops.

# 4

 
Adjust the exposure



● ▲ button → turn dial while watching the screen

# 5

Shoot





# Disabling Auto Slow Shutter



Auto slow shutter can be disabled if movement in movies is rough. However, under low light, movies may look dark.

 
1

Set the mode



2

Set the shooting mode



● [Movie auto exposure] → [OK]

3

Access the menu screen






## Disabling Auto Slow Shutter



 Auto slow shutter can be disabled if movement in movies is rough. However, under low light, movies may look dark.

### 4

Set up the camera



- [CAMERA] → [Auto slow shutter] → [SET] button



- [Disable] → [SET] button



# Recording Time-Lapse Movies (Time-Lapse Movie)



Time-lapse movies combine images that are shot automatically at a specified interval. Any gradual changes of the subject (such as changes in a landscape) are played back in fast motion.

 
1

Set the mode



2

Set the shooting mode



● [Time-lapse movie] → [OK]

3

Set up the camera






## Recording Time-Lapse Movies (Time-Lapse Movie)



 
Time-lapse movies combine images that are shot automatically at a specified interval. Any gradual changes of the subject (such as changes in a landscape) are played back in fast motion.



- Choose an item → adjust → **MENU** button

# 4

 Secure the camera and start recording





# Adjusting the Recording Volume



Adjusting the recording volume

Although the recording level (volume) is automatically adjusted when set to [Auto], you can set the level manually to suit the scene recorded.

 
1

Set the mode



2


Set the shooting mode



● [Movie] → [OK]

3

 Access the menu screen






## Adjusting the Recording Volume



Adjusting the recording volume

 Although the recording level (volume) is automatically adjusted when set to [Auto], you can set the level manually to suit the scene recorded.



● [CAMERA] → [Sound recording] → [SET] button

### 4

Set up the camera



● [Sound recording] → [Manual] → [SET] button







## Adjusting the Recording Volume



Adjusting the recording volume

Although the recording level (volume) is automatically adjusted when set to [Auto], you can set the level manually to suit the scene recorded.



- [Rec. level] →
- [SET] button →
- buttons to adjust →
- [SET] button



# Deactivating the Wind Filter



Noise caused by strong wind can be reduced with the wind filter. However, the recording may sound unnatural when this option is used when there is no wind. In this case, you can deactivate the wind filter.

 
## 1

Set the mode



## 2


Set the shooting mode



● [Movie auto exposure] → [OK]

## 3

 Access the menu screen






## Deactivating the Wind Filter



 
Noise caused by strong wind can be reduced with the wind filter. However, the recording may sound unnatural when this option is used when there is no wind. In this case, you can deactivate the wind filter.



- [CAMERA] → [Sound recording] → [Wind filter/Attenuator] → [SET] button

## 4

 Set up the camera



- [Wind Filter] → [Off] → [SET] button



# Using the Attenuator



Recording in noisy places

Set to [Auto] to reduce audio distortion by automatically activating and deactivating the attenuator to suit recording conditions. The attenuator can also be set to [On] or [Off] manually.

 
1

Set the mode



2


Set the shooting mode



● [Movie auto exposure] → [OK]

3

 Access the menu screen






## Using the Attenuator



Recording in noisy places

 
Set to [Auto] to reduce audio distortion by automatically activating and deactivating the attenuator to suit recording conditions. The attenuator can also be set to [On] or [Off] manually.



- [CAMERA] → [Sound recording] → [Wind filter/Attenuator] → [SET] button

## 4

 Set up the camera



- [Attenuator] → choose an option → [SET] button



# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Using the Self-Timer



Using the Self-Timer to Avoid Camera Shake



Adjusting the Self-Timer



Shooting by Touching the Screen (Touch Shutter)



Continuous Shooting



Changing Image Quality





# Shooting



Based on a Sample Image	Auto Mode	Specific Scenes
Image Effects (Creative Filters)	Manual Mode	Recording Movies in Movie Mode
Convenient Features		



Capturing in RAW Format



Changing the Aspect Ratio



Changing Movie Image Quality





# Using the Self-Timer



With the self-timer, you can include yourself in group photos or other timed shots. The camera will shoot about 10 seconds after you press the shutter button.

1

Access the setting screen



2

Set up the camera



● [OFF] → [10] → [SET]  
button

3

Shoot







# Using the Self-Timer to Avoid Camera Shake



This option delays shutter release until about two seconds after you have pressed the shutter button. If the camera is unsteady while you are pressing the shutter button, it will not affect your shot.

1

Access the setting screen



2

Set up the camera



● [OFF] → [2] → [SET]  
button

3

Shoot





# Adjusting the Self-Timer



You can specify the delay (0 – 30 seconds) and number of shots (1 – 10).

1

Access the setting screen



2

Set up the camera



● [OFF] → [C] →  
**MENU** button



- Choose time/no. of shots → ◀▶ buttons to choose a value → **MENU** button





## Adjusting the Self-Timer



You can specify the delay (0 – 30 seconds) and number of shots (1 – 10).

---

### 3

Shoot





# Shooting by Touching the Screen (Touch Shutter)



With this option, instead of pressing the shutter button, you can simply touch the screen and release your finger to shoot. The camera will focus on subjects and adjust image brightness automatically.

## 1

Set up the camera



- Touch [OFF] and change it to [Touch Shutter].

## 2

Shoot





# Continuous Shooting



In [A+] mode, hold the shutter button all the way down to shoot continuously.

1

Set the mode



 
2

Access the setting screen



3

Set up the camera



button

4

Shoot





## Continuous Shooting



In **[A+]** mode, hold the shutter button all the way down to shoot continuously.



- Hold the shutter button all the way down.



# Changing Image Quality



	24.0 megapixels/ high quality		Approx. 10.6 megapixels/ high quality		Approx. 5.9 megapixels/ high quality		Approx. 3.8 megapixels/ normal quality
	24.0 megapixels/ normal quality		Approx. 10.6 megapixels/ normal quality		Approx. 5.9 megapixels/ normal quality		

1

Access the setting screen



2

Choose the setting item



- → choose an option →



# Capturing in RAW Format



The camera can capture images in JPEG and RAW format. RAW images are “raw” (unprocessed) data, recorded with essentially no loss of image quality from the camera’s image processing.

1

Access the setting screen



2

Choose the setting item



- Choose [L].

3

Set up the camera



- RAW format only:  
choose [RAW]







## Capturing in RAW Format



The camera can capture images in JPEG and RAW format. RAW images are “raw” (unprocessed) data, recorded with essentially no loss of image quality from the camera’s image processing.



- JPEG+RAW:  
choose JPEG image  
quality → press the  
**MENU** button to  
select (✓) [RAW]



# Changing the Aspect Ratio



16:9



3:2



4:3



1:1

1

Access the setting screen



2

Choose the setting item



- **3:2** → choose an option → button



# Changing Movie Image Quality



Adjust movie image quality (image size and frame rate). The frame rate indicates how many frames are recorded per second, and your options depend on the NTSC or PAL setting.

1

Access the setting screen



2

Choose the setting item



- [FHD 29.97P] →  
choose an option →  
[SET] button



# Playback



Viewing	Finding	Managing
Erasing Images	Editing Stills	Processing RAW Images with the Camera
Editing Movies		



Viewing Stills



Magnifying Images



Viewing Slideshows



 
Viewing Movies



Viewing Digest Movies



# Viewing Stills



After shooting images, you can view them on the screen.

1

Enter Playback mode



2

Browse your images



- button: Next image
- button: Previous image



# Magnifying Images



Images can be magnified or reduced.

1

Enter Playback mode



 
2

Browse your images



3

Magnify or reduce images



4

Change image display





## Magnifying Images



Images can be magnified or reduced.



- Move images: ▲/▼  
/◀▶ buttons
- Switch images:  
Ⓢ button → ◀▶  
buttons



# Viewing Slideshows



Automatically play back images from a memory card.

 
 
1

Enter Playback mode



2


Access the menu screen



- [▶] → [Slideshow] → [SET] button

3

 Play the slideshow



- [Start] → [SET] button





# Viewing Movies



After recording movies, you can view them on the screen.

Movies are identified by a [SET ▶] icon.

1

Enter Playback mode



2

Browse your images



- ▶ button: Next image
- ◀ button: Previous image





## Viewing Movies



After recording movies, you can view them on the screen.

Movies are identified by a **[SET ▶]** icon.

### 3

Play the movie



● [▶] → button

### 4

Adjust the volume





# Viewing Digest Movies



A short movie of scenes that include your shots in [A] mode is created automatically. Playing a digest movie shows the scenes captured that day.

1

Enter Playback mode



2

Browse your images



3

Play the movie





## Viewing Digest Movies



A short movie of scenes that include your shots in [A] mode is created automatically. Playing a digest movie shows the scenes captured that day.



● [A] → [SET] button



# Playback



Viewing	Finding	Managing
Erasing Images	Editing Stills	Processing RAW Images with the Camera
Editing Movies		



Finding Images in an Index



Finding Images Matching Specified Conditions



Finding Images with the Front Dial



# Finding Images in an Index



By displaying multiple images in an index, you can quickly find the images you are looking for.

 
1

Enter Playback mode




2

Display images in an index



3

 Browse your images





# Finding Images Matching Specified Conditions



Find desired images quickly on a memory card full of images by filtering image display according to your specified conditions.

1

Enter Playback mode



2

Access the setting screen



3

Choose a condition



● [👁️] → [SET] button





## Finding Images Matching Specified Conditions



Find desired images quickly on a memory card full of images by filtering image display according to your specified conditions.

### 4

View the images



- Choose a condition.
- After choosing [★ / (🕒) / (📷)]: choose a second condition

- Matching images are displayed in yellow frames.







# Finding Images with the Front Dial



Use the front dial to find and jump between desired images quickly according to your specified conditions.

1

Enter Playback mode



2

Choose a condition



- In single-image display, drag left or right with two fingers.





## Finding Images with the Front Dial

 


Use the front dial to find and jump between desired images quickly according to your specified conditions.

### 3

View the images

- When search conditions are displayed, press the ▲/▼ buttons to choose one.







# Playback



 
Viewing	Finding	Managing
Erasing Images	Editing Stills	Processing RAW Images with the Camera
Editing Movies		




Protecting Individual Images

 

Protecting Multiple Images

 

Protecting a Range of Images

 


Protecting All Images at Once



Rating Images (Rating)



# Protecting Individual Images

 

Individual images can be protected to prevent accidental erasure of important images.

1

Enter Playback mode



2

Browse your images



3

Access the setting screen



4

Protect



● [PLAY] → [SET] →  
[SET] button



# Protecting Multiple Images



Multiple images can be selected individually and protected.

 
 
1

Enter Playback mode



2


Access the menu screen



- [▶1] → [Protect]  
→ [SET] button

3

 Choose the setting item



- [Select] → [SET] button






# Protecting Multiple Images



 Multiple images can be selected individually and protected.

## 4

Browse your images



- Choose an image →  
SET button

## 5

 
Protect



- [OK] → SET button



# Protecting a Range of Images



Ranges of images can be protected to prevent accidental erasure of important images.

 
1

Enter Playback mode




2

Access the menu screen



3

 Choose the setting item




- [▶] 1 → [Protect] → [Select Range] → [SET] button






## Protecting a Range of Images

 

Ranges of images can be protected to prevent accidental erasure of important images.

# 4

 Choose a starting image




- [First image] → button



- Choose an image → button

# 5

 Choose an ending image



- [Last image] → button




- Choose an image → button






## Protecting a Range of Images

 

Ranges of images can be protected to prevent accidental erasure of important images.

# 6

 
## Protect



- ▼ button → [Protect]
- [SET] button



# Protecting All Images at Once

 

All images can be protected to prevent accidental erasure of important images.

 
1

Enter Playback mode




2

Access the menu screen



3

 Choose the setting item




- [▶] 1 → [Protect] → [Protect All Images] → [SET] button





## Protecting All Images at Once

 



All images can be protected to prevent accidental erasure of important images.

---

# 4

 Set up the camera



● [OK] →  button



# Rating Images (Rating)



Organize images by rating them on a scale of 1 – 6.

1

Enter Playback mode



2

Browse your images



3

Access the setting screen



4

Set up the camera



- [★] → choose a rating → [SET] button



# Playback



 
Viewing	Finding	Managing
Erasing Images	Editing Stills	Processing RAW Images with the Camera
Editing Movies		




Erasing Individual Images



Erasing Multiple Images



Erasing a Range of Images

 

Erasing All Images



# Erasing Individual Images



You can choose and erase unneeded images one by one. Be careful when erasing images, because they cannot be recovered.

1

Enter Playback mode



2

Browse your images



3

Erase



● [Erase] → SET button



# Erasing Multiple Images



Multiple images can be selected individually and erased. Be careful when erasing images, because they cannot be recovered.

 
1

Enter Playback mode




2

Access the menu screen



3

 Choose the setting item



- [▶] 1 → [Erase] → [Select] → [SET] button

4

Browse your images





## Erasing Multiple Images




 
 
Multiple images can be selected individually and erased. Be careful when erasing images, because they cannot be recovered.


# 5

## Erase

- Choose an image →

 button to select  
(✓)

 


- [OK] →  button





# Erasing a Range of Images



A range of images can be selected and erased. Be careful when erasing images, because they cannot be recovered.

 
1

Enter Playback mode




2

Access the menu screen



3

 Choose the setting item




● [▶] 1 → [Erase] →  
[Select Range] → [SET] button






## Erasing a Range of Images

 

A range of images can be selected and erased. Be careful when erasing images, because they cannot be recovered.

### 4

 Choose a starting image




- [First image] →




- Choose an image →

### 5

 Choose an ending image




- [Last image] →

 

- Choose an image →



## Erasing a Range of Images

 


A range of images can be selected and erased. Be careful when erasing images, because they cannot be recovered.

---

# 6

 
## Erase



- ▼ button → [Erase]
- [SET] button



# Erasing All Images

 

All images can be erased at once. Be careful when erasing images, because they cannot be recovered.

 
1

Enter Playback mode




2

Access the menu screen



3

 Choose the setting item




- [▶] 1 → [Erase] → [Select All Images] → [SET] button





## Erasing All Images

 



All images can be erased at once. Be careful when erasing images, because they cannot be recovered.

---

# 4
 
## Erase



● [OK] →  button



# Playback



Viewing	Finding	Managing
Erasing Images	Editing Stills	Processing RAW Images with the Camera
Editing Movies		



Rotating Images



Resizing Images



Cropping



Applying Filter Effects



Correcting Red-Eye



# Rotating Images



Change the orientation of images and save them.

1

Enter Playback mode



2

Browse your images



3


Access the setting screen



4

Choose the setting item



● Choose .





# Rotating Images

 
 


Change the orientation of images and save them.

---

## 5

Rotate the image







# Resizing Images



Save a smaller version of an image, with fewer pixels.

1

Enter Playback mode



2

Browse your images



 
3

Access the setting screen



4

Choose the setting item



- → choose an option →





# Resizing Images




Save a smaller version of an image, with fewer pixels.

## 5

Save the new image




● [OK] →  button

## 6

Review the new image



● [Processed img.] →  button



# Cropping



You can specify a portion of an image to save as a separate image file.

1

Enter Playback mode



2

Browse your images



3

Access the setting screen



4

Choose the setting item



● [ ] → [SET] button





# Cropping



You can specify a portion of an image to save as a separate image file.

## 5

Adjust the cropping frame



- Resize: Pinch in or out on the screen
- Move: ▲/▼/◀/▶ buttons

## 6

Preview the image



- Change orientation: gear dial → [↻] button
- Change aspect ratio: gear dial → [↔] button



# Cropping



You can specify a portion of an image to save as a separate image file.



 
- dial → → button
- Switch display: button

## 7

### Save the new image



- dial → → button



- [OK] → button

## 8

### Review the new image



- [Processed img.] → button



# Applying Filter Effects



Apply effects equivalent to shooting in [📷/👤/👤]  
[👤/👤/📷/📷] modes to images and save  
them as separate images.

1

Enter Playback  
mode



2

Browse your  
images



3

Access the setting  
screen



4

Choose an effect



- [📷] → choose an option → [SET] button



 
## Applying Filter Effects



Apply effects equivalent to shooting in [MENU/PERSON/VIDEO] modes to images and save them as separate images.

### 5

Adjust the effect




- ▲/▼/◀▶ buttons or  dial to adjust → 

### 6

Save the new image




- [OK] → 

### 7

Review the new image



- [Processed img.] → 



# Correcting Red-Eye



Automatically corrects images affected by red-eye. You can save the corrected image as a separate file.

 
1

Enter Playback mode




2

Access the menu screen



3

 Choose the setting item



● [▶] 3 → [Red-Eye Correction] → [SET]







## Correcting Red-Eye



Automatically corrects images affected by red-eye. You can save the corrected image as a separate file.

4

Browse your images



5

Correct the image




● Press the  button.

6

Save the new image



● [New File] →  button

7

Review the new image





## Correcting Red-Eye



Automatically corrects images affected by red-eye. You can save the corrected image as a separate file.



- **MENU** button →  
[Processed img.] →  
 button



# Playback



Viewing	Finding	Managing
Erasing Images	Editing Stills	Processing RAW Images with the Camera
Editing Movies		



Processing RAW Images



Setting Processing Conditions and Processing RAW Images



# Processing RAW Images



Process images captured in RAW format on the camera. The original RAW image is retained, and a copy is saved as a JPEG.

1

Enter Playback mode



2

Choose a RAW image



3

Access the setting screen



4

Choose the setting item



● [RAW | JPEG] → [RAW] ↓ → [SET] button



 
## Processing RAW Images



Process images captured in RAW format on the camera. The original RAW image is retained, and a copy is saved as a JPEG.

### 5

#### Save



● [OK] → button

### 6

#### Review the new image



● [Processed img.] → button



# Setting Processing Conditions and Processing RAW Images



Processing conditions can be set in detail before processing RAW images on the camera. The original RAW image is retained, and a copy is saved as a JPEG.

1

Enter Playback mode



2

Choose a RAW image



3

Access the setting screen



4

Choose the setting item



● [RAW | JPEG] → [RAW | JPEG] → [SET] button





## Setting Processing Conditions and Processing RAW Images



Processing conditions can be set in detail before processing RAW images on the camera. The original RAW image is retained, and a copy is saved as a JPEG.

### 5

Set the processing conditions



- Choose an item →



- Choose an option →

### 6

Save



- → button →
- [OK] → button

### 7

Review the new image



 
- [Processed img.] → button



# Playback



Viewing	Finding	Managing
Erasing Images	Editing Stills	Processing RAW Images with the Camera
Editing Movies		



Cutting Off the Beginning/End of Movies



Reducing File Sizes



Editing Digest Movies





# Cutting Off the Beginning/End of Movies



You can remove unneeded portions from the beginning and end of movies. Note that digest movies cannot be cut off.

 
1

Enter Playback mode



2

Browse your movies



- Choose a movie →  
SET button

3

Start and then pause playback



- [▶] → SET button  
→ SET button during playback





# Cutting Off the Beginning/End of Movies



You can remove unneeded portions from the beginning and end of movies. Note that digest movies cannot be cut off.

## 4

Choose the setting item



- [SC] → [SET] button

## 5

Specify portions to cut



- [SC] → [LEFT/RIGHT] buttons to move [SC]
- [SC] is displayed.

- Cut the beginning of the movie (from [SC]) by choosing [LEFT/RIGHT], and cut the end of the movie by choosing [SC].



## Cutting Off the Beginning/End of Movies



You can remove unneeded portions from the beginning and end of movies. Note that digest movies cannot be cut off.

# 6

Review the edited movie



● [▶] → [SET] button

# 7

Save



● [📁] → [SET] button



● [New File] → [SET] button



● [Save w/o Comp.] → [SET] button



# Reducing File Sizes



Movie file sizes can be reduced by compressing movies.

 
1

Enter Playback mode



2

Browse your movies



- Choose a movie →  
[SET] button

3

Start and then pause playback



- [▶] → [SET] button  
→ [SET] button during playback





## Reducing File Sizes



Movie file sizes can be reduced by compressing movies.

4

Choose the setting item



● [SET] → [SET] button

5

Choose the setting item



● [SET] → [SET] button

6

Save



● [New File] → [SET] button



● [Compress & Sav.] → [SET] button



# Editing Digest Movies



Individual chapters (clips) recorded in [A] mode can be erased, as needed. Be careful when erasing clips, because they cannot be recovered.

1

Enter Playback mode



2

Browse your images



- Choose a [SET] image  
→ [SET] button





## Editing Digest Movies



Individual chapters (clips) recorded in [A] mode can be erased, as needed. Be careful when erasing clips, because they cannot be recovered.

### 3

Start and then pause playback



- [A] → [SET] button  
→ [SET] button during playback

### 4

 
Select the clip to erase



- [A] → [SET] button

### 5

Choose [Erase]




- [Erase] → [SET] button




Individual chapters (clips) recorded in [A5] mode can be erased, as needed. Be careful when erasing clips, because they cannot be recovered.

## 6

 Erase



● [OK] →  button





# Wireless Features



Available Wireless Features



Sending Images to an  
NFC-Compatible Smartphone



 
Sending Images to an NFC-Compatible  
Smartphone (Playback Mode)



Sending Images to a Bluetooth  
Enabled Smartphone



Registering Web Services  
CANON iMAGE GATEWAY



Registering Web Services  
Other Web Services



Uploading Images to Web  
Services



# Available Wireless Features



## Wi-Fi Features

### Smartphones and Tablets

Send images to smartphones and tablet computers that have Wi-Fi features.

### Web Services

Send images to CANON iMAGE GATEWAY or other Web services.

## Bluetooth® Features

You can easily pair the camera with a smartphone featuring Bluetooth low energy technology (hereafter referred to as “Bluetooth”).

You can shoot or view images by using your smartphone as a remote control.





## Available Wireless Features



### Media Players

View images on DLNA\*-compatible TVs or other devices.

\* Digital Living Network Alliance

### Printers

Print images wirelessly on a PictBridge-compatible printer (supporting DPS over IP).

### Other Cameras

Send and receive images wirelessly between Wi-Fi-compatible Canon cameras.

For instructions on these three features, refer to the Help Guide.





# Sending Images to an NFC-Compatible Smartphone



1

Turn the camera on

 


2

Install Camera Connect



- Turn on NFC.



- Touch the **N** marks together.
- Google Play starts up automatically on the smartphone.



- Download and install Camera Connect.






# Sending Images to an NFC-Compatible Smartphone


 
## 3

Establish the connection




- Touch the  marks together.




- [OK] → 
- Camera Connect starts up on the smartphone, and the devices are connected automatically.

## 4

 Adjust the privacy setting




- [All images] → 

## 5

Send



- Choose an image → [Send this image] → 







## Sending Images to an NFC-Compatible Smartphone



# 6

End the connection

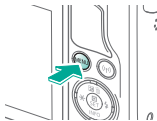

- **MENU** button →  
[OK] →  button





# Sending Images to an NFC-Compatible Smartphone (Playback Mode)



1

Enter Playback mode

 


2

Install Camera Connect



- Turn on NFC.



- Touch the **N** marks together.
- Google Play starts up automatically on the smartphone.



- Download and install Camera Connect.






## Sending Images to an NFC-Compatible Smartphone (Playback Mode)


 
### 3

Establish the connection



- Touch the marks together.

### 4

 
Browse your images



- [OK] →
- Camera Connect starts up on the smartphone, and the devices are connected automatically.

### 5

Send



- Choose an image →
- **MENU** button →
- [Send] →







## Sending Images to an NFC-Compatible Smartphone (Playback Mode)



# 6

End the connection

- **MENU** button →  
[OK]





# Sending Images to a Bluetooth Enabled Smartphone



1

 
Install Camera Connect



- Download and install Camera Connect from the App Store/ Google Play.



2

Turn the camera on



3

  Register a nickname



- **MENU** button → [F4] → [Wireless settings] → [Nickname] → [SET] button
- Enter a nickname → **MENU** button






# Sending Images to a Bluetooth Enabled Smartphone



 
## 4

### Prepare for pairing



 - The [Wireless settings] screen is displayed again.



- [Bluetooth settings] → [Pairing] →



- The camera is ready for the connection.

## 5

### Start Camera Connect



- Turn on Bluetooth.
- Start Camera Connect.





## Sending Images to a Bluetooth Enabled Smartphone



# 6

Select the camera to connect to



- Do this on the smartphone.

 


# 7

Complete pairing



- [OK] → button



- Press the button.

# 8

Import images



- Do this on the smartphone.



# Registering Web Services

## CANON IMAGE GATEWAY



1

Access the Wi-Fi menu



2

Choose [Cloud]



- If [Device Nickname] screen is displayed:  
[OK] → [SET] button

3

Accept the agreement to enter an email address



- [Cloud] → [SET] button



- [I Agree] → [SET] button





# Registering Web Services CANON IMAGE GATEWAY



## 4

Choose how to connect to the access point



### (a) WPS connection

 
- [Connect with WPS]  
→ button →  
step 5 (A)

### (b) Choosing from the list


- Choose an access point → button  
→ step 5 (B)

## 5

(A) Establish the connection



- [WPS (PBC mode)]  
→ button

 

- On the access point, hold down the WPS connection button for a few seconds.







# Registering Web Services CANON IMAGE GATEWAY

 



- Press the  button.

## (B) Establish the connection



-  button → enter the password → [Next] →  button





- [Auto] →  button

## 6

## Enter your email address



-  button → enter your email address → [Next] →  button





# Registering Web Services CANON IMAGE GATEWAY



## 7

 
Enter a four-digit number



- button → enter a number → [Next] → button
- This number is also needed in step 9.

## 8


Check for the message



- You will receive a notification message at the email address entered in step 6.
- On the confirmation screen, press the button.

## 9

 Set up camera link



- now changes to .



- On a computer/ smartphone, visit the page in the message and follow the instructions.







## Registering Web Services CANON iIMAGE GATEWAY



- [Cloud icon] → [SET] button
- [Computer icon] and CANON iIMAGE GATEWAY are now added as destinations.





# Registering Web Services

## Other Web Services



1

Access the setting screen



- From a computer/ smartphone, access <http://www.canon.com/cig/> to visit CANON IMAGE GATEWAY.

2

 
Configure the Web service you want to use



- Follow the instructions to complete the settings.

3

Access the Wi-Fi menu



- [Cloud icon] → [SET] button
- The Web service settings are now updated.



# Uploading Images to Web Services



1



Access the Wi-Fi menu



2

 
Choose the destination





- Choose an icon →  button
- If [Select Recipient] screen is displayed: choose an option →  button

3


Send




- Choose an image → [Send this image] →  button
- [OK] on screen after sending →  button




# Other Settings

 

 Preventing the AF-Assist Beam from Firing




Deactivating the Red-Eye Reduction Lamp

 


Changing the Image Display Period after Shots



 
Date-Based Image Storage




File Numbering

 


Formatting Memory Cards

 

Low-Level Formatting

 

Changing the Video System

 


Using Eco Mode






## Other Settings

 


Power-Saving Adjustment



 
Screen Brightness



 Customizing Shooting Information Display



 Customizing Playback Information Display




World Clock




Date and Time



 Display Language




Muting Camera Sounds

 

Activating Camera Sounds




## Other Settings

 


Hiding Hints and Tips



 
Listing Shooting Modes by Icon




Adjusting the Touch-Screen Panel

 

 Automatically Locking the Touch-Screen Panel




Disabling Auto Sensor Cleaning

 

Activating Sensor Cleaning



 Cleaning the Sensor Manually



Checking Certification Logos




Setting Copyright Information to Record in Images




## Other Settings



 Deleting All Copyright  
Information



 Restoring Main Camera  
Default Settings



Restoring Defaults for  
Individual Camera Functions






# Preventing the AF-Assist Beam from Firing



 The lamp lights up to help you focus when you press the shutter button halfway in low-light conditions. This lamp can be deactivated.

1

Access the menu screen



2

 
Choose the setting item



● [CAMERA] → [AF-assist beam firing] → [SET]

3

Set up the camera



● [Disable] → [SET]






# Deactivating the Red-Eye Reduction Lamp



 A red-eye reduction lamp lights up to reduce red-eye when the flash is used in low-light shots. This lamp can be deactivated.


1

Access the menu screen



2

 
Choose the setting item




● [CAMERA] → [Flash Control] → [SET] button

3

 Set up the camera



● [Red-eye reduc.] → [SET] button

 

● [Off] → [SET] button



# Changing the Image Display Period after Shots



 
1

Access the menu screen



2


Choose the setting item



- [CAMERA] → [Image review] → [SET] button

3

 Set up the camera



- Choose an option → [SET] button




# Date-Based Image Storage



 Instead of saving images in folders created each month, you can have the camera create folders each day you shoot to store shots taken that day.


1

Access the menu screen



2

 
Choose the setting item



- [F1] → [Create Folder] → [SET] button

3

 Set up the camera



- [Daily] → [SET] button




# File Numbering



 Your shots are automatically numbered in sequential order (0001 – 9999) and saved in folders that store up to 2,000 images each. You can change how the camera assigns file numbers.


1

Access the menu screen



2

 
Choose the setting item



- [MENU] → [File Numbering]  
→ [SET] button

3

 Set up the camera



- Choose an option →  
[SET] button



# Formatting Memory Cards

 


Before using a new memory card or a card formatted in another device, you should format the card with this camera.

Formatting erases all data on a memory card, which cannot be recovered.


1

Access the menu screen



2

 
Choose the setting item




● [MENU] → [Format] →  
[SET] button

3

 Execute



● [OK] → [SET] button

 

● [OK] → [SET] button →  
[OK]




# Low-Level Formatting



 Perform low-level formatting in the following cases: [Memory card error] is displayed, the camera is not working correctly, card image reading/writing is slower, continuous shooting is slower, or movie recording suddenly stops.  
Low-level formatting erases all data on a memory card, which cannot be recovered.


1

Access the menu screen



2

 
Choose the setting item



- [MENU] → [Format] → [SET] button

3

 Execute



- ▼ button to select (✓) → [OK] → [SET] button







## Low-Level Formatting



 Perform low-level formatting in the following cases: [Memory card error] is displayed, the camera is not working correctly, card image reading/writing is slower, continuous shooting is slower, or movie recording suddenly stops.  
Low-level formatting erases all data on a memory card, which cannot be recovered.

---



- [OK] →  button → [OK]




# Changing the Video System



 Set the video system of any television used for display. This setting determines the image quality (frame rate) available for movies.


1

Access the menu screen



2

 
Choose the setting item



- [Y1] → [Video system] → [SET] button

3

 Set up the camera



- Choose an option → [SET] button






# Using Eco Mode



 This function allows you to conserve battery power in Shooting mode. When the camera is not in use, the screen darkens to save battery life.


1

Access the menu screen



2

 
Choose the setting item



- [MENU] → [Eco Mode]  
→ [SET] button

3

 Set up the camera



- [On] → [SET] button




# Power-Saving Adjustment



 Adjust the timing of automatic camera and screen deactivation (Auto Power Down and Display Off, respectively) as needed.


1

Access the menu screen



2

 Choose the setting item



- [F2] → [Power Saving] → [SET] button



- [Display Off] or [Auto Power Down] → [SET] button







Adjust the timing of automatic camera and screen deactivation (Auto Power Down and Display Off, respectively) as needed.

## 3

 Set up the camera



- Adjust →  button




# Screen Brightness



 Adjust screen brightness.


1

Access the menu screen



2

 Choose the setting item



● [Y2] → [Disp. Brightness] → [SET] button

3

Set up the camera







## Screen Brightness



Adjust screen brightness.

---



-  buttons to adjust brightness →  button



 
# Customizing Shooting Information Display



A grid can be shown on the shooting screen. You can also choose the type of histogram shown when the ▼ button is pressed.


1

Access the menu screen



2

 
Choose the setting item



● [CAMERA] → [Shooting information display] → [SET] button

3

 Set up the camera






A grid can be shown on the shooting screen. You can also choose the type of histogram shown when the ▼ button is pressed.

## 4
 
### Set up the camera

- [Grid display] or [Histogram] →



- ▲/▼ buttons to choose an option → button




# Customizing Playback Information Display



 The shooting information displayed changes each time you press the ▼ button in Playback mode. You can customize the information displayed.


1

Access the menu screen



2

 Choose the setting item



• [▶] 5 → [Playback information display]  
→ [SET] button

3

Set up the camera








## Customizing Playback Information Display



The shooting information displayed changes each time you press the ▼ button in Playback mode. You can customize the information displayed.

---



- Choose info to display →  button to select (✓)



 
# World Clock



To ensure that your shots will have the correct local date and time when you travel abroad, simply register the destination in advance and switch to that time zone. This convenient feature eliminates the need to change the Date/Time setting manually.


## 1

Access the menu screen



## 2

 
Choose the setting item




- [MENU] → [Time Zone] → [SET] button

## 3

 Specify your destination



- [World] → [SET] button

 




To ensure that your shots will have the correct local date and time when you travel abroad, simply register the destination in advance and switch to that time zone. This convenient feature eliminates the need to change the Date/Time setting manually.

## 4

 Switch to the destination time zone

- Choose a destination



- [World] →  
**MENU** button




# Date and Time



 Adjust the date and time.


1

Access the menu screen



2

 
Choose the setting item



- [F2] → [Date/Time]  
→ [SET] button

3

 Set up the camera



- Navigate and adjust  
→ [SET] button




# Display Language



 Change the display language as needed.


1

Access the menu screen



2

 Choose the setting item



- [Y2] → [Language] → [SET] button

3

Set up the camera



- Choose a language → [SET] button




# Muting Camera Sounds



 Prevent the camera from playing sounds when you press the shutter button halfway or activate the self-timer.


1

Access the menu screen



2

 
Choose the setting item



● [3] → [Beep] →  
[SET] button

3

 Set up the camera



● [Off] → [SET] button




# Activating Camera Sounds



 Sounds can be played as feedback after camera operations, such as pressing buttons or touching the screen.


1

Access the menu screen



2

 
Choose the setting item



- [Y3] → [Operation Vol.] → [SET] button

3

 Set up the camera



- [On] → [SET] button




# Hiding Hints and Tips



 Guidance is normally shown when you choose items on Quick Control or shooting screens. If you prefer, you can deactivate this information.


1

Access the menu screen



2

 
Choose the setting item



- [Y/3] → [Hints & Tips]
- [SET] button

3

 Set up the camera



- [Off] → [SET] button





# Listing Shooting Modes by Icon



List shooting modes on the selection screen by icon only, without mode names, for faster selection.

 
1

Set the mode




2

Access the menu screen



3

 Choose the setting item



● [Mode icon size/info] → [Mode icon size/info] button







List shooting modes on the selection screen by icon only, without mode names, for faster selection.

---

## 4

 Set up the camera



- [Small, no info] →  
 button




# Adjusting the Touch-Screen Panel



 Sensitivity of the touch-screen panel can be increased, so that the camera responds to a lighter touch.


1

Access the menu screen



2

 
Choose the setting item



● [Y3] → [Touch Operation] → [SET]

3

 Set up the camera



● [Sensitive] → [SET]




# Automatically Locking the Touch-Screen Panel



 To prevent unintended operations, you can set up automatic locking of the touch-screen panel.


1

Access the menu screen



2

 
Choose the setting item



● [Y3] → [Screen auto-lock settings] → [SET] button

3

 Set up the camera






 
## Automatically Locking the Touch-Screen Panel




To prevent unintended operations, you can set up automatic locking of the touch-screen panel.



- [Screen auto lock]  
→ [Enable] →  button



- [Auto-locks after] →  
choose an option →  
 button




# Disabling Auto Sensor Cleaning



 The image sensor is automatically cleaned to remove dust whenever you turn the camera on or off, or when the camera shuts off in Power Saving mode. You can disable automatic cleaning.


1

Access the menu screen



2

 
Choose the setting item



- [Y3] → [Sensor cleaning] → [SET] button  
→ [Auto cleaning] button  
→ [SET] button

3

 Set up the camera



- [Disable] → [SET] button




# Activating Sensor Cleaning



 The image sensor is automatically cleaned to remove dust whenever you turn the camera on or off, or when the camera shuts off in Power Saving mode. You can activate cleaning as needed.


1

Access the menu screen



2

 
Choose the setting item



- [Y/3] → [Sensor cleaning] → [SET] button → [Clean now] → [Clean now] → [SET] button

3

 Execute



- [OK] → [SET] button



## Cleaning the Sensor Manually



Any dust that remains after automatic cleaning can also be removed by using an optional blower or other specialized tool.

The surface of the image sensor is extremely delicate. If the sensor must be cleaned manually, we recommend requesting service from a Customer Support Help Desk.

 
1

Make sure the camera is off



2

Detach the lens



3

Clean the sensor








# Checking Certification Logos



 Some logos for certification requirements met by the camera can be viewed on the screen. Other certification logos appear in this manual, on the camera packaging, or on the camera body.


1

Access the menu screen



2

 Choose the setting item



● [4] → [Certification Logo Display] → [SET] button




# Setting Copyright Information to Record in Images



 To record the author's name and copyright details in images, set this information beforehand.


1

Access the menu screen



2

 Choose the setting item



- [F4] → [Copyright Info] → [SET] button

3

Register



- [Enter Author's Name] or [Enter Copyright Details] → [SET] button → enter a name → **MENU** button






## Setting Copyright Information to Record in Images



To record the author's name and copyright details in images, set this information beforehand.

---



● [Yes] →  button



 
# Deleting All Copyright Information



You can delete both the author's name and copyright details at the same time.


1

Access the menu screen



2

 Choose the setting item



- [MENU] → [Copyright Info] → [SET] button

3

Delete



- [Delete Copyright Info] → [SET] button



- [OK] → [SET] button




# Restoring Main Camera Default Settings



 If you accidentally change a setting, you can restore default camera settings.


1

Access the menu screen




2

 Choose the setting item



 
- [MENU] → [Reset camera] → [SET] button



- [Basic settings] → [SET] button

3

 Execute



- [OK] → [SET] button




# Restoring Defaults for Individual Camera Functions



 
1

Access the menu screen




2

 
Choose the setting item



- [F4] → [Reset camera] → [SET] button

 

- [Other settings] → [SET] button

 

- Choose the function to reset → [SET] button







## Restoring Defaults for Individual Camera Functions


 
# 3

## Execute



- [OK] →  button





1-point (AF frame mode) 152

## A

AE lock 124

AF frames 152

AF-point zoom 145

Art bold effect (shooting mode) 105

Aspect ratio 230

Auto Lighting Optimizer 128

Auto mode (shooting mode) 40, 80, 81

Av (shooting mode) 179

## B

Battery pack

Charging 22

Eco mode 325

Black and white images 99

Bulb exposure 183

## C

Camera

Resetting 353, 354

Camera Connect 296, 299, 302

CANON IMAGE GATEWAY 305, 310

Charging 22

Chromatic aberration correction 172

Cleaning (image sensor) 346, 347, 348

Close-up (shooting mode) 91

Color temperature 136, 138





Color (white balance) 132  
Compression 227  
Creative Assist (shooting mode) 193  
Creative filters 274  
Cropping 271  
Custom WB 133  
Custom white balance 133

## D

### Date/time

    Changing 336  
    Settings 27  
    World clock 334

Display language 28

Display period 318

DLNA 294

## E

Eco mode 325

### Editing

    Cropping 271  
    Red-eye correction 276  
    Resizing images 269

Erasing 258, 259, 261, 264

Erasing all 264

### Exposure

    AE lock 124  
    Compensation 122  
    FE lock 161



## F

Face+Tracking 152

Favorites 256

FE lock 161

File numbering 320

Fish-eye effect (shooting mode) 103

### Flash

FE lock 161

Flash exposure compensation 160

Flash metering 164

Flash output 165

Flash timing 163

Mode 159

Resetting 168

Flash exposure compensation 160

## Focusing

AF frames 152

MF peaking 150

Servo AF 153

Touch AF 156

## Focus range

Manual focus 145

Food (shooting mode) 93

## G

Grainy B/W (shooting mode) 99



## H

- Handheld night scene (shooting mode) 95
- High dynamic range (shooting mode) 114
- High ISO speed noise reduction 173
- Hybrid Auto (shooting mode) 83

## I

- Image dust prevention 347, 348
- Images
  - Display period 318
  - Erasing 258, 259, 261, 264
  - Protecting 248, 249, 251, 254
- Image stabilization 170
- Index display 242
- Indicator 68, 316, 317
- ISO speed 126

## J

- Jump display 245

## L

- Landscape (shooting mode) 90

## Lens

- Attaching 29
- Detaching 31
- Lock release 31
- Long exposure 183
- Long exposure noise reduction 175

## M

- Macro photography 91
- Magnified display 234
- Manual focus 145
- Memory cards 24



## Menu

Basic operations 64

Touch operations 72

Metering method 125

MF (Manual focusing) 145

MF peaking 150

Miniature effect (shooting mode) 111

## Movies

Editing 285, 288, 290

Image quality (recording pixels/frame rate) 231

M (shooting mode) 181

Multi Shot Noise Reduction 174

## N

### Noise reduction

High ISO speed 173, 174

Long exposure 175

## P

Part names 48

Peripheral illumination correction 172

Picture Style 139, 140, 141



## Playback

- Digest movies 239
  - Image search 243
  - Index display 242
  - Jump display 245
  - Magnified display 234
  - Movies 237
  - Slideshow 236
  - Stills 233
  - Touch operations 74
- Portrait (shooting mode) 88
- Protecting 248, 249, 251, 254
- P (shooting mode) 7

## Q

- Quick Control screen
- Basic operations 62
  - Touch operations 70

## R

- Rating 256
- RAW 228
- RAW image processing 280, 282
- Recording pixels (image size) 227
- Red-eye correction 276
- Resetting 353, 354
- Resizing images 269
- Rotating 267



## S

Saturation 140

Screen

    Display language 28

Searching 243

Self portrait (shooting mode) 86

Self-timer

    Customizing the self-timer 222

    Using the self-timer 220

Sending images 311

Sending images to a smartphone 296, 299,  
302

Sending images to Web services 311

Sensor cleaning 346, 347

Servo AF 153

Slideshow 236

Smooth zone AF 152

Soft focus (shooting mode) 101

Sounds 338

Sports (shooting mode) 92

Strap 21

## T

Time-lapse movie (shooting mode) 209

Tone priority 129

Touch AF 156

Touch Shutter 224

Traveling with the camera 334

Tv (shooting mode) 177



## W

Water painting effect (shooting mode) 107

White balance (color) 132

Wind filter 214

Wireless features 294

World clock 334

## Z

Zoom 40, 42



## Precautions for Wireless Features (Wi-Fi, Bluetooth, or Others)



- Countries and Regions Permitting Wireless Function Use
  - Use of wireless functions is restricted in some countries and regions, and illegal use may be punishable under national or local regulations.  
To avoid violating wireless regulations, visit the Canon website to check where use is allowed.  
Note that Canon cannot be held liable for any problems arising from wireless function use in other countries and regions.
- Doing any of the following may incur legal penalties:
  - Altering or modifying the product
  - Removing the certification labels from the product
- Before goods or technologies in the camera regulated by the Foreign Exchange and Foreign Trade Act are exported (which includes bringing them outside Japan or showing them to non-residents in Japan), export or service transaction permission may be required from the Japanese government.
- Because this product includes American encryption items, it falls under U.S. Export Administration Regulations, and cannot be exported to or brought into a country under U.S. trade embargo.
- Be sure to make notes of the Wi-Fi settings you use.
- The wireless settings saved to this product may change or be erased due to incorrect operation of the product, the effects of radio waves or static electricity, or accident or malfunction.







## Precautions for Wireless Features (Wi-Fi, Bluetooth, or Others)



- Please note that Canon accepts no responsibility for direct or indirect damages or loss of earnings resulting from a degradation or disappearance of content.
- When transferring ownership, disposing of the product, or sending it for repair, restore the default wireless settings by erasing any settings you have entered.
- Canon will not make compensation for damages resulting from loss or theft of the product.
- Canon accepts no responsibility for damages or loss resulting from unauthorized access or use of target devices registered on this product due to loss or theft of the product.
- Be sure to use the product as directed in this manual.  
Be sure to use the wireless function of this product within the guidelines noted in this manual. Canon accepts no responsibility for damages or loss if the function and product are used in ways other than as described in this manual.
- Do not use the wireless function of this product near medical equipment or other electronic equipment.  
Use of the wireless function near medical equipment or other electronic equipment may affect operation of those devices.





# Radio Wave Interference Precautions



- This product may receive interference from other devices that emit radio waves. To avoid interference, be sure to use this product as far away as possible from such devices, or avoid using the devices at the same time as this product.



# Trademarks and Licensing



- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store, iPhone, and iPad are trademarks of Apple Inc.
- The SDXC logo is a trademark of SD-3C, LLC.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.
- Wi-Fi<sup>®</sup>, Wi-Fi Alliance<sup>®</sup>, WPA<sup>™</sup>, WPA2<sup>™</sup> and Wi-Fi Protected Setup<sup>™</sup> are trademarks or registered trademarks of the Wi-Fi Alliance.
- The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Canon Inc. is under license. Other trademarks and trade names are those of their respective owners.
- The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- All other trademarks are the property of their respective owners.
- This device incorporates exFAT technology licensed from Microsoft.





- This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and non-commercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant video. No license is granted or implied for any other use for MPEG-4 standard.





# Disclaimer



- Unauthorized reproduction of this manual is prohibited.
- All measurements based on Canon testing standards.
- Information subject to change without notice, as are product specifications and appearance.
- Illustrations and screenshots in this manual may differ slightly from the actual equipment.
- The above items notwithstanding, Canon cannot be held liable for any loss arising from the use of this product.

**Canon**